
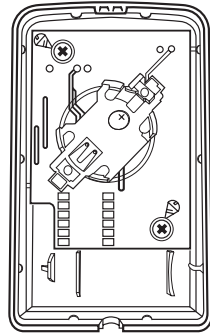


Yale[®]

Easy Fit EF-Series Alarm System

Wirefree 868MHz Yale EF-PB Panic Button

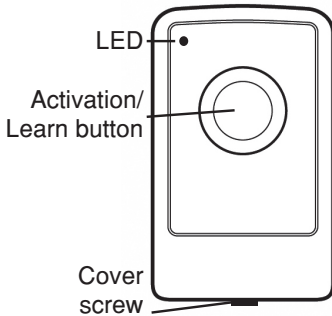

Description:

- Activation/Learn Button (Red): Use for activating the alarm and for learning-in.
- LED Indicator for activation and low battery.
- Knockouts for Wall / Corner Mounting
- Top & Bottom Cover securing screw

Pack contents

- 1 x Panic Button
- 2 x wall plugs/cross head fixing screws.
- 1 x CR2032 battery

Location:

Locate the panic button taking into account the following points:

- Not Clearly visible to an intruder
- Easily accessible
- Out of reach of children
- indoor use only

Mounting:

The panic button can be use free standing or wall mounted. For wall mounting:

- Break through the two knockouts in the rear case
- Drill holes on the wall surface using the holes as template. Insert wall plugs and screw the cover to the wall.
- Replace the cover and tighten case screw.

Programming & Installation

Programming:

Program your panic button before installation and test afterwards. Please see your current system instruction book.

Installation:

Undo the cover screw and insert the battery. Please observe the battery polarity.

Operation

Activation:

Press and hold the red button for at least 3 seconds. LED will light momentarily and the alarm will be activated.

Silence an Alarm:

Press and hold the red button for at least 10 seconds. LED will light momentarily and the alarm

will be silenced.

- Silencing the alarm with the panic button does not reset the system. If the alarm is armed prior to activation, the system will re-arm after being silenced with the panic button.

Specification

Environmental conditions:

-10c to 40c , relative humidity 85% non-condensing. Indoor use only

Radio:

868MHz FM

2 Year Instruction Statement:

This product is guaranteed for consumers against faulty workmanship, materials and function for a period of 2 years from the date of purchase providing the full installation and maintenance instructions are followed. Please keep your proof of purchase safe, this must be submitted when making a claim under this guarantee.

Please note that it is a condition of this guarantee that your Yale product:

- Has been correctly installed and maintained in accordance with the Yale installation and maintenance instructions provided to you at the time of purchase.
- Has not been modified or damaged in any way.
- Has not been subjected to unauthorized repairs.

Yale are responsible under this guarantee for repairing the product or replacing the product as we deem necessary. If there is fault with the product, please contact Customer Services on 01902 364647, who will give you the name of an expert and confirm what you need to do to make a claim under this guarantee.

Please do not carry out any repairs without our authority or by using an unauthorised expert. Any repairs or other works carried out without our authorization or by using an unauthorized expert will not be covered under this guarantee.

This guarantee is non transferrable and applies to products purchased in the United Kingdom only. This guarantee does not apply to normal wear and tear. This does not affect your statutory rights. A full copy of the product instructions are available upon request or by visiting our website www.yale.co.uk.



WEEE

Note: Waste electrical products and batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



PACKAGING

RoHS



The world's favorite lock
www.yalelock.com

E109/12