





Linus® L2 Backplate Handle Fitting Instructions

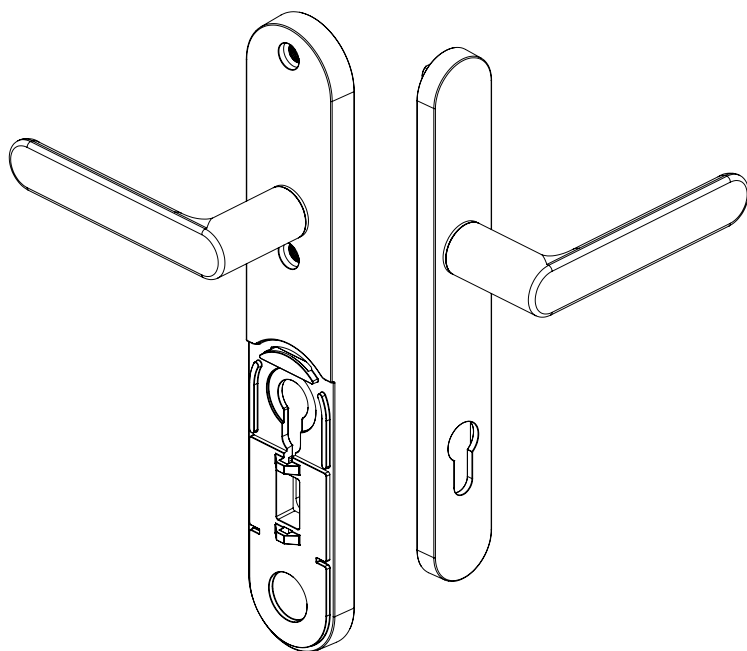

Contents


Linus®L2 Backplate Handle overview.....	2
Inside the box	3
Changing your existing cylinder	4
Installing your Linus® L2 Backplate Handle	6
Installing the Linus® Smart Lock L2	11
Setting up the Linus® Smart Lock L2	15

Linus® L2 Backplate Handle Overview

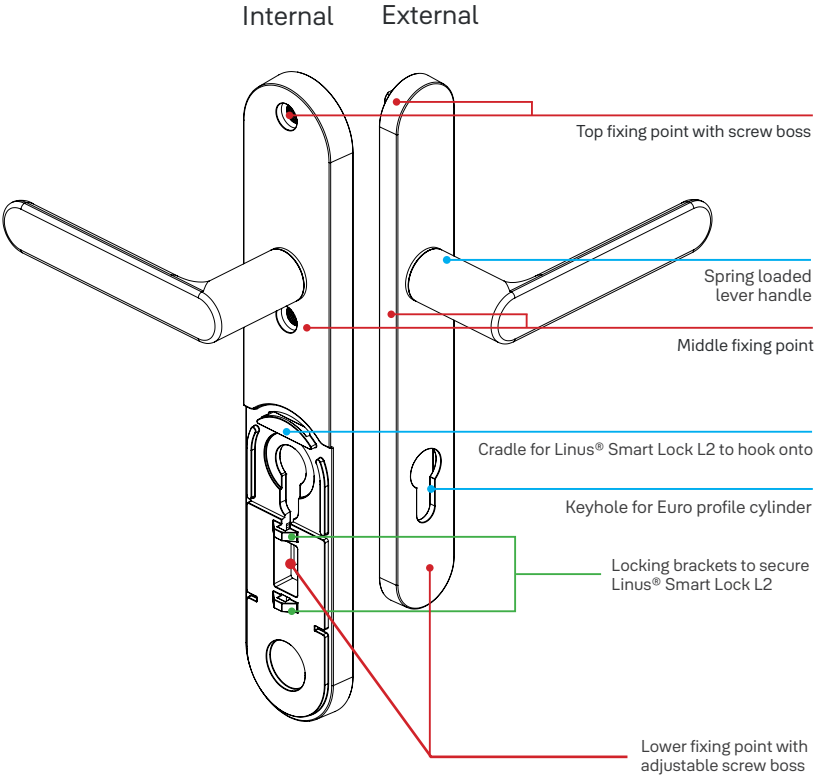

Before you start


The Linus® Smart Lock L2 will be mounted on the internal side of your door, your new Linus® L2 Backplate Handle will be the cradle for this.

1. Check you have all relevant parts in your box – Refer to the 'What's in the box' section. 
2. Ensure you have the correct tools to hand.
3. Remove any screw caps from your existing internal backplate handle and make a note of the location of the fixing points.
4. When you remove the existing handles, please set aside any screws and spindles to use as a guide to select the equivalent Linus® versions.



Once backplate handles have been removed, please ensure the door is kept in an 'open position' until the new handle and Linus® Smart Lock L2 are fitted.

What's in the box

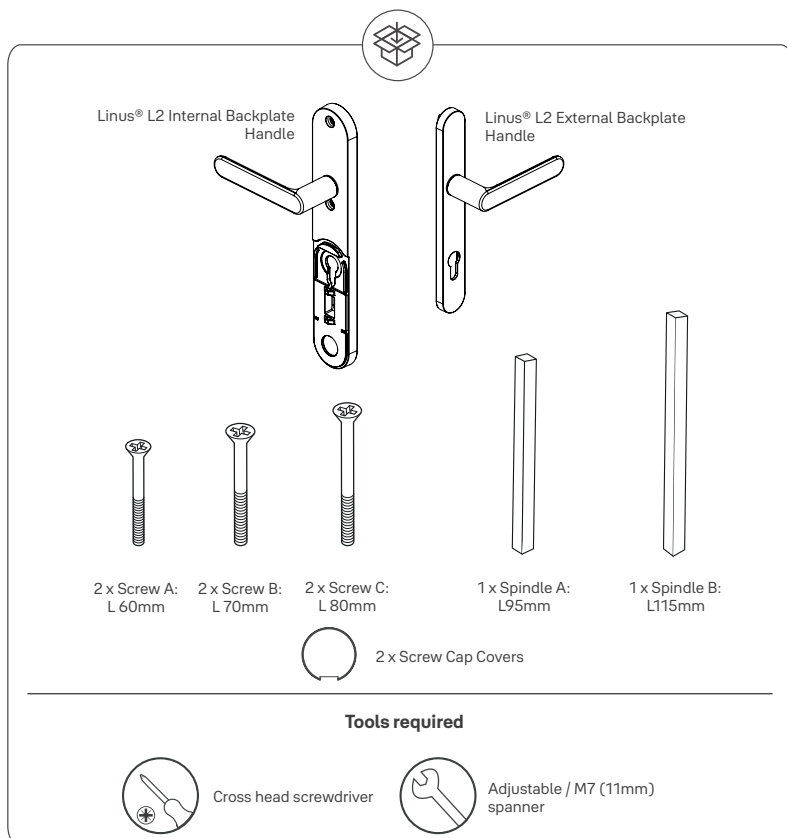


Changing / Installing the Cylinder:

To ensure your Linus® Smart Lock L2 works correctly and maintains all features, we may recommend changing your cylinder. To do this, please use the following directions.


If you struggle to remove the cylinder with the door hardware in place, please remove these first and try again.

Please scan the QR code to quickly check if you need to change your cylinder and whether you need to use the thumbturn adapter supplied with your Linus® Smart Lock L2.

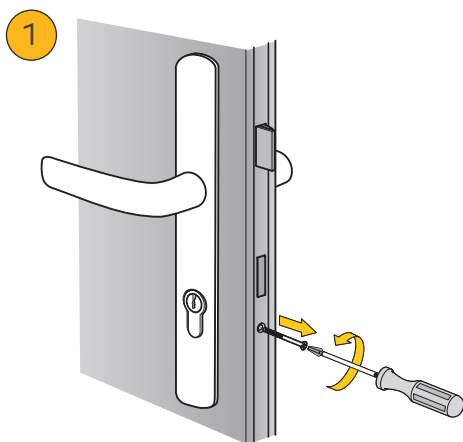


Remove (but keep safe) the screw to release the cylinder.

2

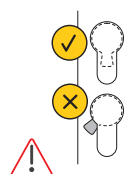


Turn the key in both directions to align the cam with the cylinder housing (as shown above)

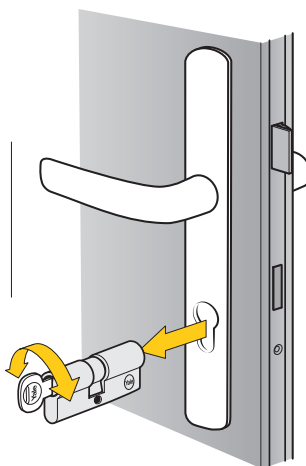


Remove the old cylinder. Use the key to align the cam (moving mid section) with the cylinder housing in order to push in/pull out the cylinder


3

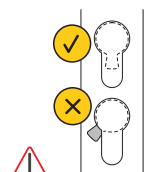

Turn the key in both directions to align the cam with the cylinder housing (as shown above)

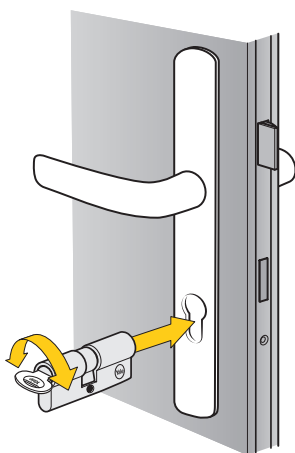


4

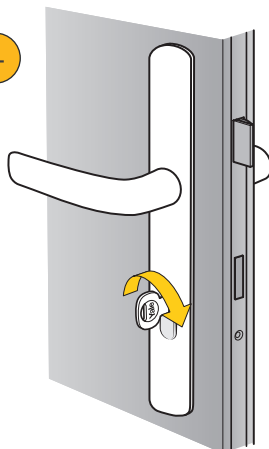

Insert the new cylinder with the cam aligned with the cylinder housing (as shown above).

Check if the key turns and the lock operates correctly. If the key turns easily, the cam is aligned. If not, adjust cylinder position slightly and try again.


5

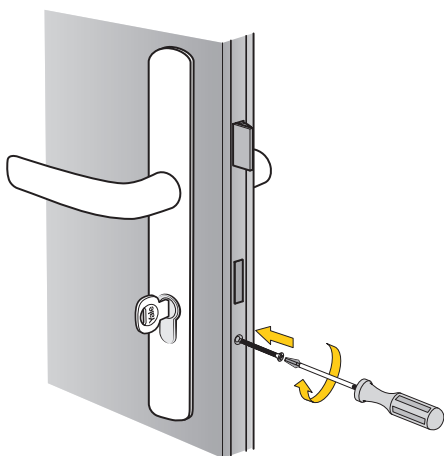

When aligned correctly the lock should operate smoothly and the screw can be replaced to secure the cylinder. If a smooth operation is not achieved, your Linus® Smart Lock L2 may not operate correctly.

Installing the Linus® L2 Backplate Handle

1

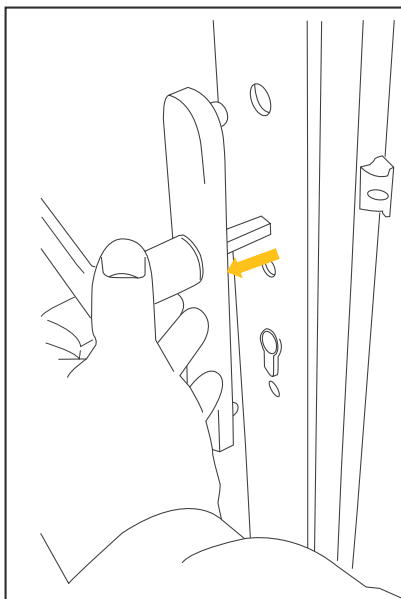

Remove the existing handle from your door (most handles are secured with 2 screws, so remove these). Please note the position of these fixings as you will need to fix your new handles using the existing holes.




Once backplate handles have been removed, please ensure the door is kept in an 'open position' until the new handle and Linus® Smart Lock L2 are fitted.

2


There are 3 screw placements on your new Linus® L2 Backplate Handle, of which you only need two depending on the placement of your existing fixing points (previously noted).

The backplate is supplied with the screw bosses fitted into the top & bottom fixing points. If your existing holes require you to use the middle fixing point, you will need to unscrew and move the boss from the top to the centre position.

On the interior handle, loosen the screw boss on the lower fixing point with a spanner, to provide some adjustability when fitting.

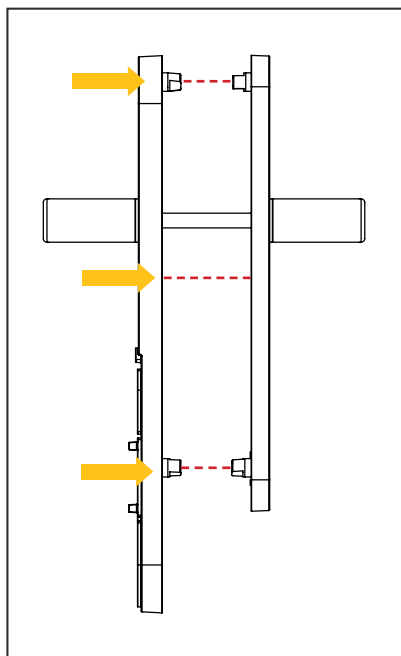


Installing the Linus® L2 Backplate Handle

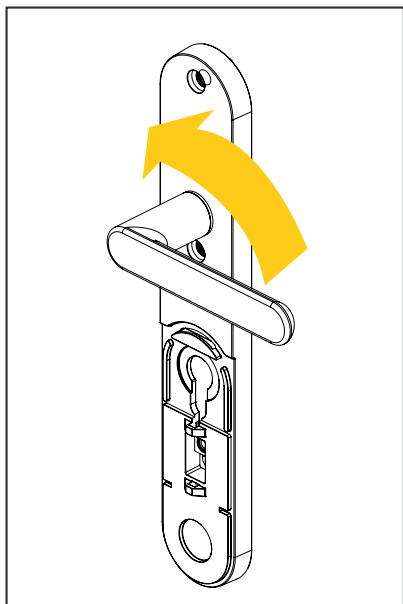


- 3 Turn the lever handle through 180 degrees to ensure the handle is in the correct orientation for your door.

- 4 Use your existing external backplate handle to align and identify the correct fixing points with those on the interior Linus® L2 Backplate Handle, using the spindle & fixing screws as a guide.

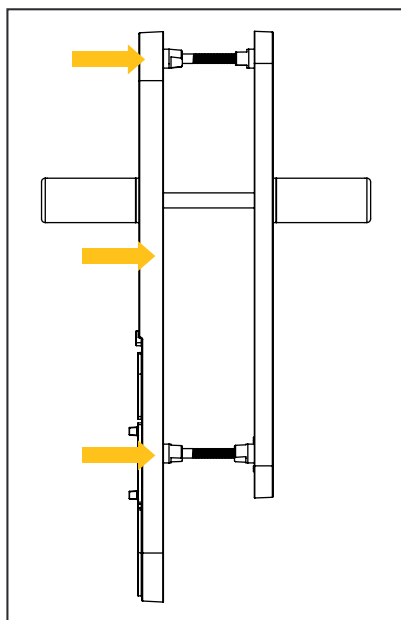

Installing the Linus® L2 Backplate Handle

5

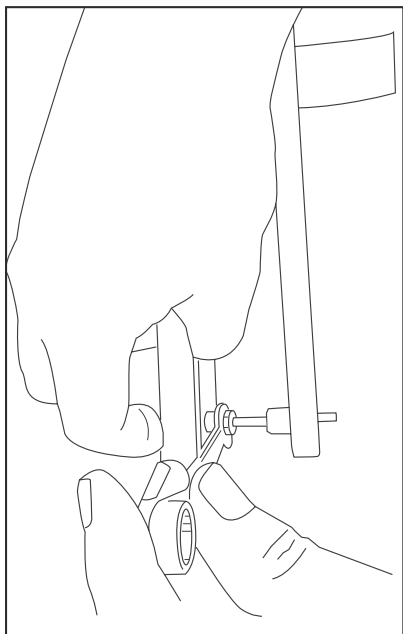

Once the correct fixing positions have been identified, tighten the screw bosses on the Linus® L2 Backplate Handle.


Repeat this process to align the external Linus® L2 Backplate Handle with the internal one you have just fixed and tighten the screw bosses on the exterior backplate.

6

Take the correct spindle length for your door and insert into the handle on the external Linus® Backplate Handle and push the spindle through the spindle hole in the door.




If you currently have a split spindle, you will lose this functionality.

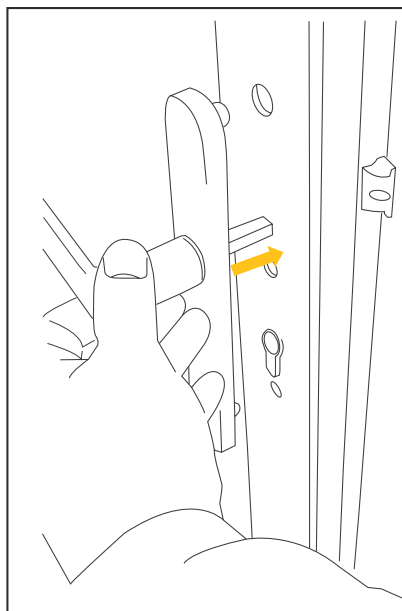

Installing the Linus® L2 Backplate Handle


7

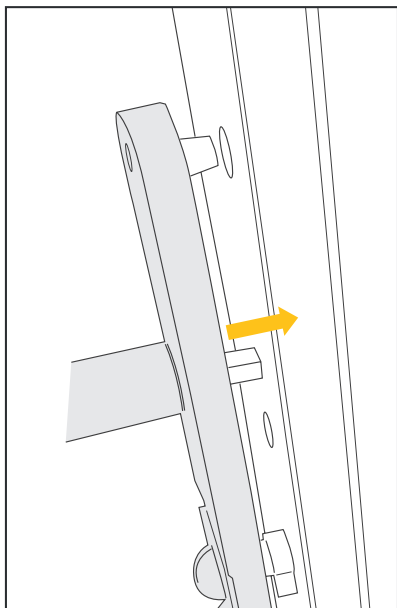

Use the protruding spindle as a guide to fit the internal Linus® L2 Backplate Handle to the inside of the door.


8

Using the correct screw length for your door, fit the screws from the internal side of the door. These need to pass through the internal handle, the door itself and fit into the screw boss on the external handle.

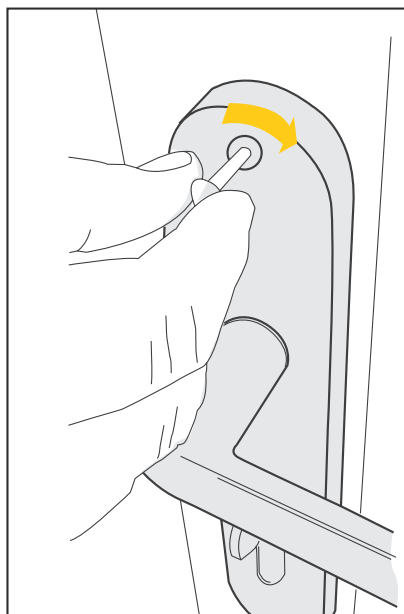


Installing the Linus® L2 Backplate Handle

- 9 Tighten all screws, using a cross head screwdriver at both fixing points until firmly attached and fit screw caps to hide the screw heads.

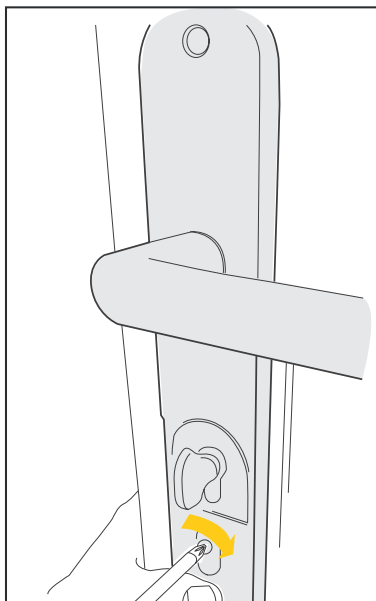


Installing the Linus® Smart Lock L2

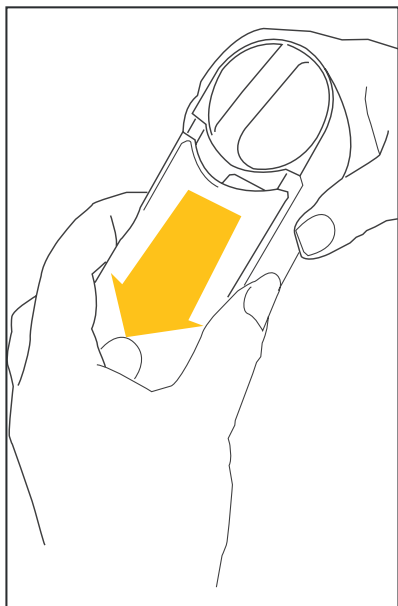


- 1 Remove the battery cover on your Linus® Smart Lock L2 by pulling down from the top.

- 2 Ensure the yellow switch inside the battery compartment is in the down position. If the battery is in the compartment, please remove first.

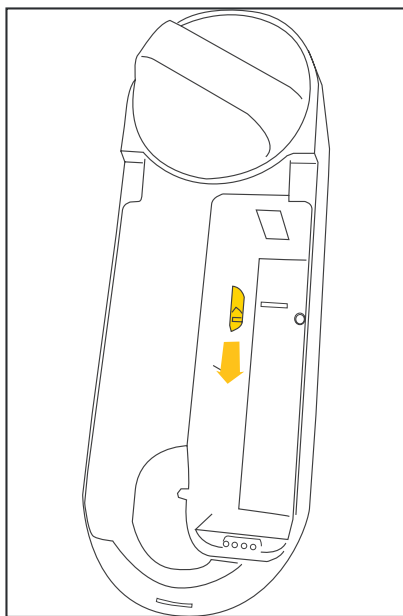


Installing the Linus® Smart Lock L2

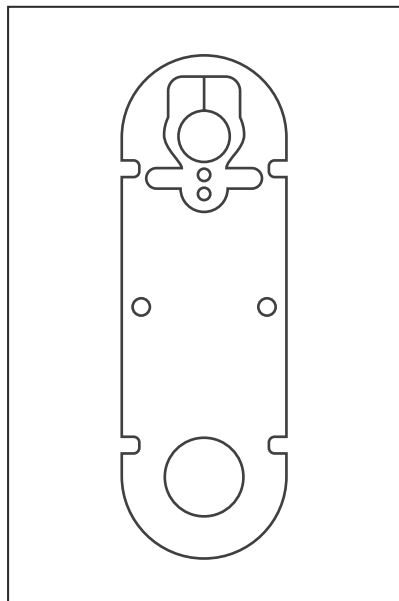


- 3 Remove the backplate from the back of your Linus® Smart Lock L2 and set aside, you will not need this.

- 4 Align the Linus® Smart Lock L2 with the cradle on the backplate & pull down slightly until you feel it hook on to the cradle.

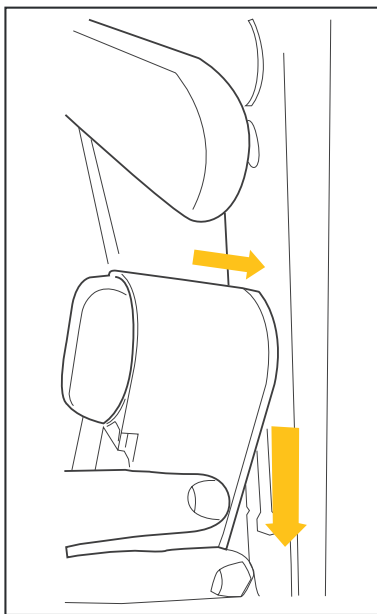


Installing the Linus® Smart Lock L2

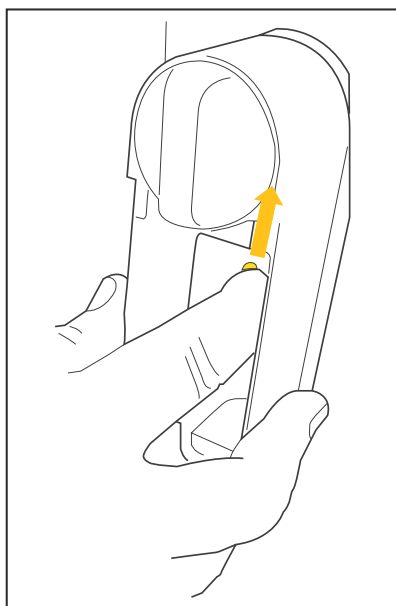


- 5 Slide the yellow switch inside the battery compartment upwards to firmly lock the Linus® L2 into position onto the Backplate Handle. Check it is securely attached by hand.

- 6 The Yale logo orientation depends on the type of lock it is installed on. To change the orientation, turn the battery cover over and locate the yellow light pipe. Gently rotate this through 180 degrees, ensuring it remains firmly attached.

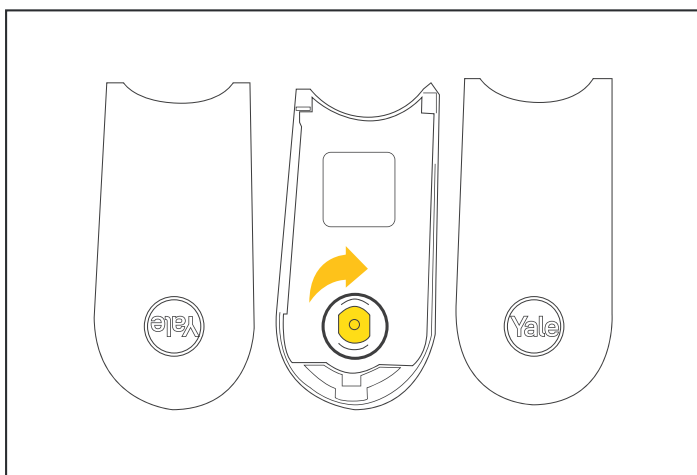

Installing the Linus[®] Smart Lock L2

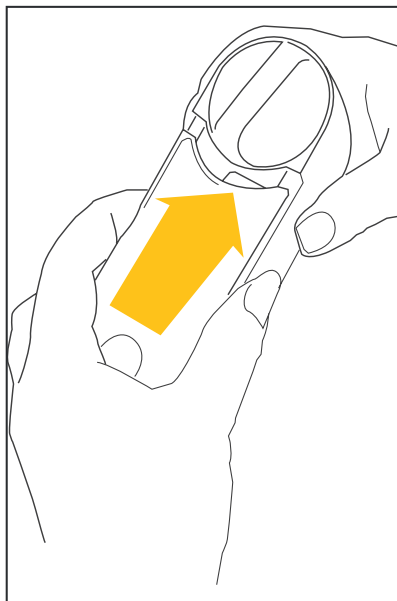

- 7 Insert the battery, ensuring the pins on the battery align with the pins in the battery compartment; then slide the battery cover back into position.


- 8 Lift the handle to ensure the deadbolt and / or locking hooks activate and protrude from the edge of the door.



Installing the Linus® Smart Lock L2

Press down the handle to ensure the latch and deadbolt / locking hooks retract.

9

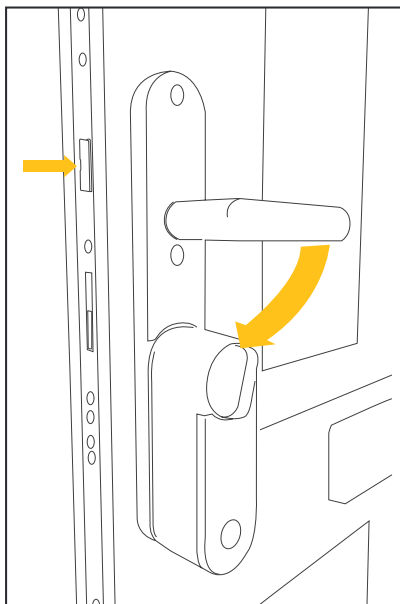

10



Yale Home

Now you have installed the handle and lock on the door, you are now ready to set up your new smart door lock.

Please download the Yale Home app and follow the in-app instructions to correctly calibrate & set up your new Linus® Smart Lock L2.

You do not need to pay attention to any comments on cylinder type in the app, as you will have already updated your cylinder at this stage if relevant.





For Linus® Smart Lock L2 help and support,
please scan the above QR tag.

Part of ASSA ABLOY

The 2 year guarantee for this
product is active from the
date of purchase.

Consumer Support Team

Visit: yalehome.co.uk/help-support
Yale UK, School Street, Willenhall, WV13 3PW

Tel: 01824 731141

